


ASSEMBLY INSTRUCTIONS

Ventford Reclaimed 36 in. Bath Vanity in Brushed light oak

with Vanity Top with White Basin

MADE IN VIETNAM

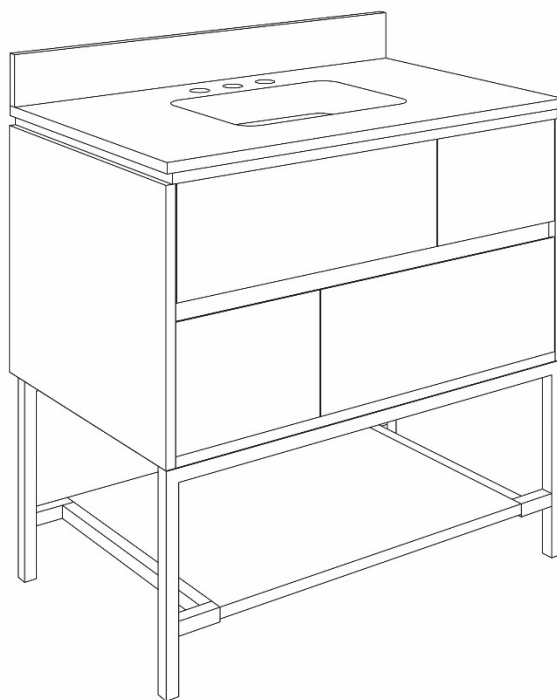

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service.
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-998-7021

HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this River Crest. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Decorators Collection!

Table of Contents

Table of Contents	2	Tools Required.....	4
Safety Information	2	Hardware Included.....	5
Warranty	3	Package Contents.....	5
limited lifetime Warranty.....	3	Installation – [1 Wall Hanging]	6
What is Covered.....	3	Installation – [2 Free Standing]	7
What is Not Covered.....	3	Maintenance	9
California and Minnesota Residents	3	Care and Cleaning	9
California residents.....	3	Troubleshooting	9
Minnesota residents.....	3		
Pre-Installation	4		
Planning installation.....	4		

Safety Information



DANGER

- ❑ Keep small parts away from children during assembly.
- ❑ Failure to follow warnings and cautions could result in serious injury.
- ❑ Product is designed to hold 200 pounds. Exceeding this limit may damage the product or cause injury to the user.
- ❑ DON'T use harsh bathroom cleaners or grout cleaners on any natural stone



WARNING

- ❑ Read these instructions carefully and keep in a safe place.
- ❑ Adult assembly required.
- ❑ This product should only be used on a flat, level surface.
- ❑ Do not over tighten connectors (screws, bolts, etc.) Overtightening can lead to product damage.
- ❑ Small parts may present choking hazard prior to assembly.
- ❑ Do not stand, step or climb on unit.



CAUTION

- ❑ USE preventative cleaning measures to keep your stone pristine.
- ❑ USE sealers according to the product specific directions.
- ❑ Blot spills quickly, and wash with mild soap and warm water.
- ❑ Stone countertops (Granite, Marble, etc.) are surprisingly resilient to stains and scratches. However, as a preventative measure, any spills on the stone surfaces should be wiped up within a reasonable amount of time. Don't let liquid sit on the stone overnight. Stones are most prone to staining by oil and acid, so be sure to blot these spills up as soon as they happen. Follow up by cleaning the stone with a mild non-abrasive soap and water.
- ❑ Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- ❑ Using abrasive cleansers will damage the surface.

Warranty

LIMITED LIFETIME WARRANTY

WHAT IS COVERED

Home Decorators Collection products are manufactured with superior quality standards and workmanship and are backed by our limited lifetime warranty. Home Decorators Collection products are warranted to the original consumer purchaser to be free of defects in materials or workmanship. We will replace FREE OF CHARGE any product or parts that proves defective. Simply, return the product / part to any of The Home Depot retail locations or call 1-800-998-7021 to receive the replacement item. Proof of purchase (original sales receipt) from the original consumer purchaser must be made available for all Home Decorators Collection warranty claims.

WHAT IS NOT COVERED

This warranty excludes incidental/consequential damages and failures due to misuse, abuse or normal wear and tear. This warranty excludes all industrial, commercial & business usage, whose purchasers are hereby extended a five-year limited warranty from the date of purchase, with all other terms of this warranty applying except the duration of warranty. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights that vary from state to state and province to province. Please see a store or contact 1-800-998-7021 for more details.

California and Minnesota Residents

CALIFORNIA RESIDENTS



WARNING THIS PRODUCT CAN EXPOSE YOU TO CHEMICAL INCLUDING FORMALDEHYDE WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE LEUKEMIA AND CANCERS OF THE NOSE, THROAT, AND SINUSES. FOR MORE INFORMATION GO TO www.P65Warnings.ca.gov/furniture.

MINNESOTA RESIDENTS

"IMPORTANT HEALTH NOTICE.

SOME OF THE BUILDING MATERIALS USED IN THIS HOME (OR THESE BUILDING MATERIALS) EMIT FORMALDEHYDE. EYE, NOSE, AND THROAT IRRITATION, HEADACHE, NAUSEA AND A VARIETY OF ASTHMA-LIKE SYMPTOMS, INCLUDING SHORTNESS OF BREATH, HAVE BEEN REPORTED AS A RESULT OF FORMALDEHYDE EXPOSURE. ELDERLY PERSONS AND YOUNG CHILDREN, AS WELL AS ANYONE WITH A HISTORY OF ASTHMA, ALLERGIES, OR LUNG PROBLEMS, MAY BE AT GREATER RISK. RESEARCH IS CONTINUING ON THE POSSIBLE LONG-TERM EFFECTS OF EXPOSURE TO FORMALDEHYDE.

REDUCED VENTILATION MAY ALLOW FORMALDEHYDE AND OTHER CONTAMINANTS TO ACCUMULATE IN THE INDOOR AIR. HIGH INDOOR TEMPERATURES AND HUMIDITY RAISE FORMALDEHYDE LEVELS. WHEN A HOME IS TO BE LOCATED IN AREAS SUBJECT TO EXTREME SUMMER TEMPERATURES, AN AIR-CONDITIONING SYSTEM CAN BE USED TO CONTROL INDOOR TEMPERATURE LEVELS. OTHER MEANS OF CONTROLLED MECHANICAL VENTILATION CAN BE USED TO REDUCE LEVELS OF FORMALDEHYDE AND OTHER INDOOR AIR CONTAMINANTS.

IF YOU HAVE ANY QUESTIONS REGARDING THE HEALTH EFFECTS OF FORMALDEHYDE, CONSULT YOUR DOCTOR OR LOCAL HEALTH DEPARTMENT."

Pre-Installation

PLANNING INSTALLATION


Check the vanity for damage before installation. If any part of the vanity is missing or damaged, contact the Customer Service Team at 1-800-986-3460.

Ensure that the vanity location is accessible to water supply and drain lines. It is recommend that you rough-in the water lines and drain before installing the vanity.




NOTE: A drain pipe and trap are not included with this vanity.

VANITY AND COUNTERTOP DIMENSIONS

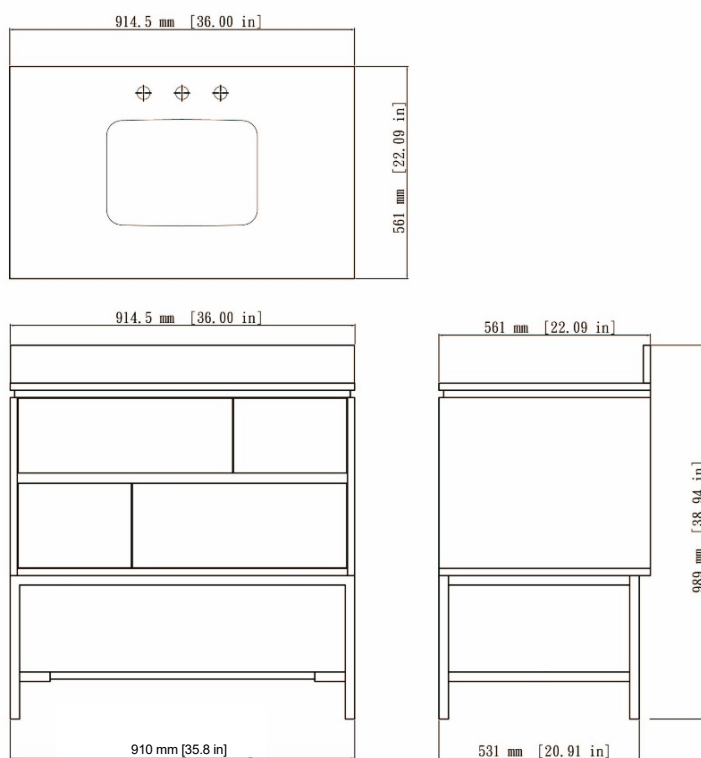

TOOLS REQUIRED



Drill




Pencil



Bit



Safety Glasses



Phillips
screwdriver



Silicone



Level




Stud Finder




Tape
Measure

HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.

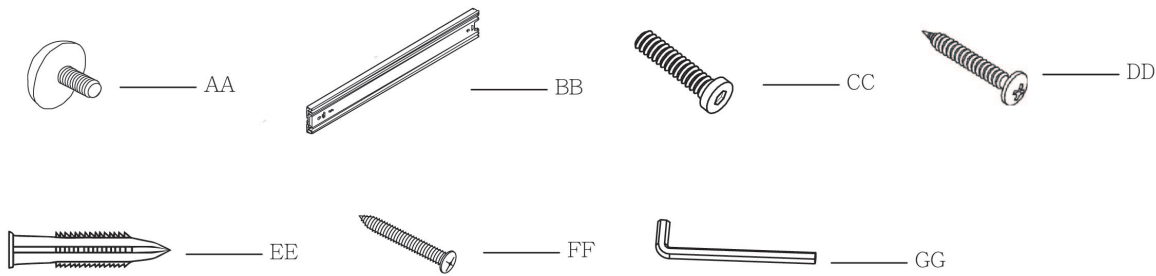

Part	Description	Quantity
AA	Leveler	4
BB	Drawer slide	4
CC	Ale Head Bolt	24
DD	Screw	4
EE	Anchor	10
FF	Screw	10
GG	Allen key	1

PACKAGE CONTENTS

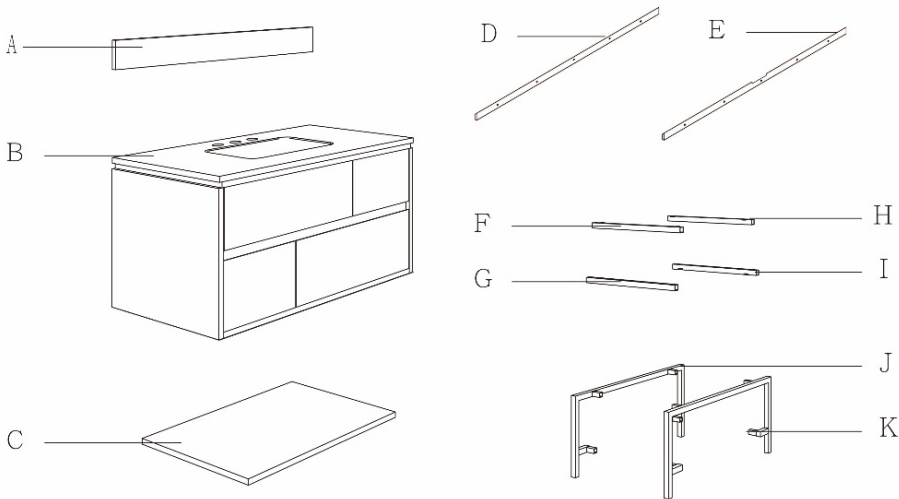


Part	Description	Quantity
A	Backsplash	1
B	Vanity	1
C	Bottom shelf	1
D	Wall hanging cleat (upper)	1
E	Wall hanging cleat (lower)	1
F-I	Iron tube	4
J-k	Iron stand	2

Installation – [1 Wall Hanging]


1 Finding studs

- Use a stud finder to find edges of wood and locate the center.
- The top and bottom solid wood hanging cleat must screw into at least 2 wood studs or more.

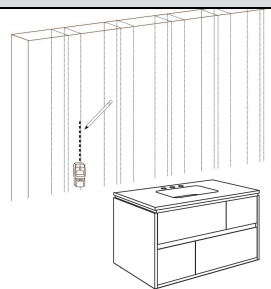


2 Installing the wall hanging cleats

- Use a pencil to mark the installation for the cleats (D, E). use a level to ensure the cleats (D, E) will be level before installing to the wall.
- Install the twelve anchors (EE) provided into the wall the wall as shown in the diagram. If necessary, pre-drill the anchor holes using a drill.
- With the beveled edges facing up, the two wall hanging cleats (D, E) to the wall using the twelve screws (FF) provided.
- Must identify (D) and (E) positions before installing

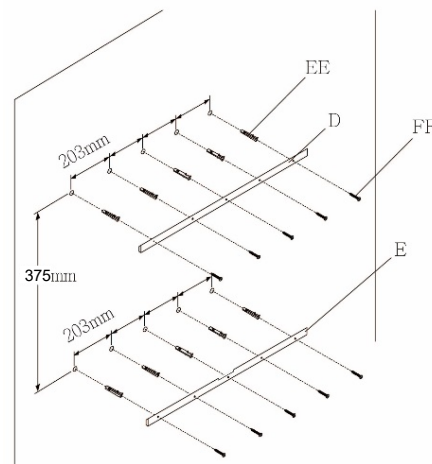



3 Hanging the vanity

- With help from another person, carefully hang the vanity (B) onto the wall hanging cleats.

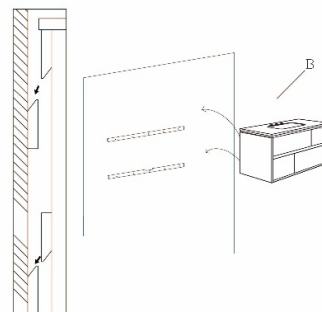

4 Installing the backsplash


- Apply silicone to the back of the backsplash (A)
- Place the backsplash (A) onto the vanity (B). Be sure to align the backsplash (A) with the top of vanity (B).
- Allow the silicone to dry before using the vanity.

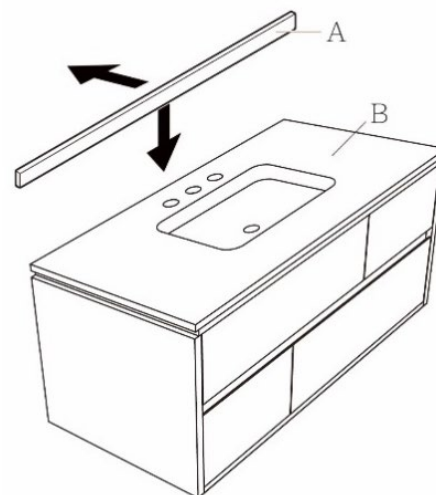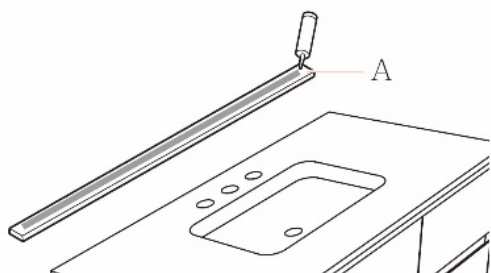

Installation – [2 Free Standing]


1 Installing iron stand

- Place the metal stand (J) onto the floor.
- Take the metal tubes (F), (G), (H), (I) and insert the tubes on to the protruding ends of the stand. (Make sure the lock points are facing inwards to each other).
- Note: Please ensure that the legs and stand are parallel to each other.

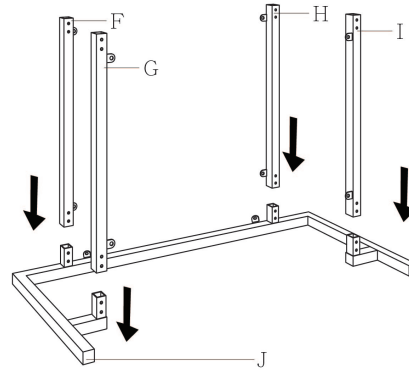


2 Installing iron feet

- Insert and tighten the screws (CC) in the corresponding holes on the metal legs and tighten. (Please ensure that the legs and stand are parallel to each other).
- Place the other metal stand (K) onto the opposing side of the metal legs.

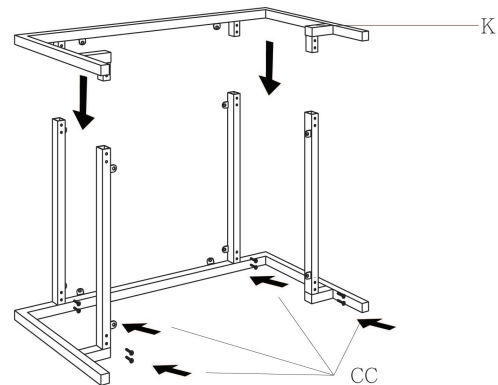


3 Locking iron feet

- Insert and tighten the other screws (CC) in to the holes of the metal stand. (Please ensure that the legs and stand are parallel to each other).

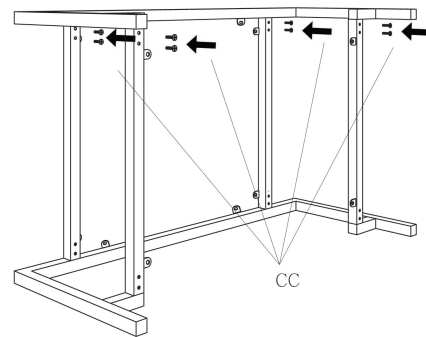

4 Installing wooden board


- Place the wooden board (C) onto top/over the protruding ends.
- Insert and tighten the screws (DD) into the insertion point.

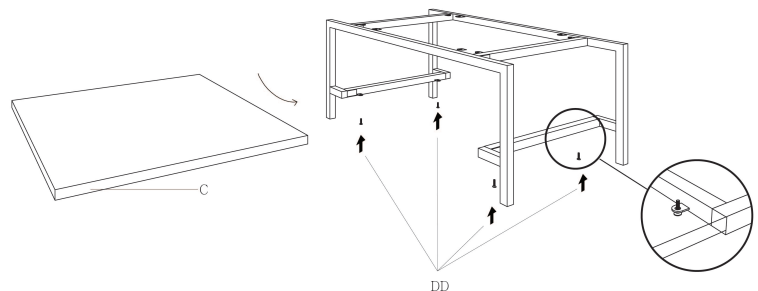

Installation – [2 Free Standing]



5 Adjusting the levelers

- Insert the levelers (AA) into the ends of the of the metal stand. (Please ensure that the levelers are screwed in tightly).

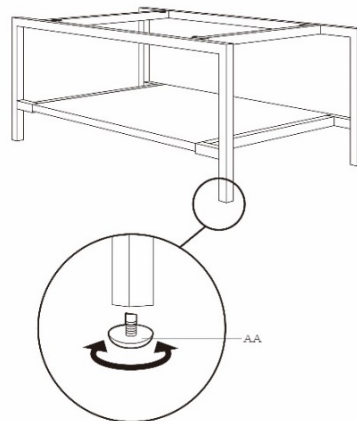



6 Merge sink and iron feet

- Place the vanity onto top of the metal stand. (Please make sure that the corners of the vanity and metal stand are placed right on top of each other)
- Place the vanity (B) onto the metal stand.
- Insert and tighten the screws (CC) into the corresponding insertion holes and tighten.

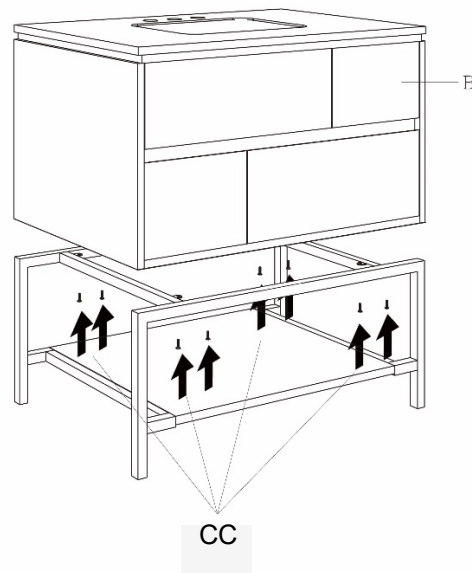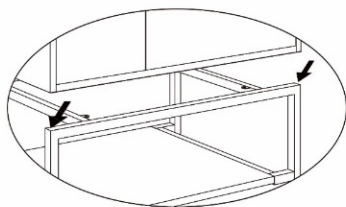

7 Installing the backsplash

- Apply silicone to the back of the backsplash (A)
- Place the backsplash (A) onto the vanity (B). Be sure to align the backsplash (A) with the top of vanity (B).
- Allow the silicone to dry before using the vanity

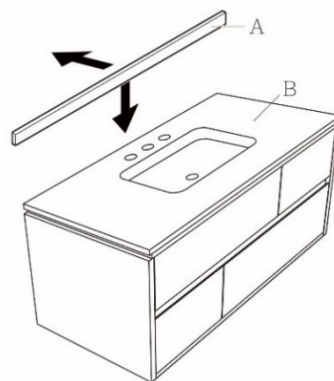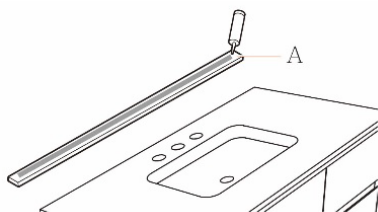

Maintenance

- In the even that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts/screws periodically and tighten them if necessary.

Care and Cleaning

- Rinse vanity top with clean, hot water frequently.
- Blot spills quickly, and wash with mild soap and warm water.
- Clean the surface with a glass cleaner or other household cleansers that are non-abrasive
- Remove oil-based stains with acetone, mineral spirits, or ammonia.
- Organic stains like coffee, tea, or juice can be removed with hydrogen peroxide, mixed with a few drops of ammonia
- Water spots or rings can be removed by buffing the spots gently with 00-gauge steel wool.
- Small nicks and scratches can often be removed the same way.
- Larger scratches, chips, and resilient stains may require professional help. Please contact your local stonemason for details.
- Use if you have Natural Stone Your stone was sealed at the factory, but reapplication is necessary over time. How often is determined by the quality of the sealer used, and the frequency of use. We recommend using a penetrating non-toxic sealer for bath areas.

Troubleshooting

Problem	Possible	Solution
The vanity is tilted.	The wall mounted hardware/cleats are not level.	Reinstall the wall mounted hardware/cleats to ensure they are level.

The logo for Home Decorators Collection is centered on a dark gray rectangular background. It features the word "HOME" in a large, white, serif font. Below it, the word "DECORATORS" is written in a smaller, white, sans-serif font. At the bottom, the word "COLLECTION" is written in an even smaller, white, sans-serif font, followed by a registered trademark symbol (®).

HOME DECORATORS COLLECTION®

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service.
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-998-7021

HOMEDEPOT.COM/HOMEDECORATORS

Retain this manual for future use.