

www.wholesaletrailer.com

COMING SOON!

MAGNUM 17K AND 20K
BALLMOUNT ACCESSORIES
 MAGNUM SHANK (10" AND 15" DROP)
 MAGNUM PINTLE ADAPTER
 MAGNUM BALLMOUNT ADAPTER
 MAGNUM PINTLE SHANK



PLEASE CALL FOR PRICING

NEW

Class 5+ SuperHitch Magnum

20K



	YEAR	MODEL	DESCRIPTION	TLI#	WTS#	PRICE
FORD	99-08	F250 / F350	LONG OR SHORT BED	F1002M	TLF1002M	\$
	2008	F450	FACTORY INSTALLED 8' F350 BED	F1002M	TLF1002M	\$
CHEV	01-08	2500/3500 HD CLASSIC & NEW BODY	LONG BED	C1205M	TLC1205M	\$
	07/08	2500/3500 HD NEW BODY	SHORT BED	C1206M	TLC1206M	\$

Class V SuperHitch

17K



	YEAR	MODEL	DESCRIPTION	TLI#	WTS#	PRICE
FORD	80-97	F250/F350	SHORT OR LONG BED	F1000 (H10)	TLF1000 (H10)	\$
	99-08	F250/F350	LONG OR SHORT BED	F1002	TLF1002	\$
	05-08	F450/F550/ CAB & CHASSIS	AFTERMARKET BED	F1003 (H8)	TLF1003 (H8)	\$
	2008	F450	FACTORY INSTALLED 8' F350 BED	F1002	TLF1002	\$
DODGE	80-93	2500/3500	LONG BED	F1000 (1, H8)	TLF1000 (1, H8)	\$
	94-02	2500/3500	LONG BED	D1100	TLD1100	\$
	94-02	2500/3500	SHORT BED	D1100 (1, H10)	TLD1100 (1, H10)	\$
	03-08	2500/3500 HD	LONG BED WITH FACTORY HITCH	D1102(2, 3)	TLD1002 (2, 3)	\$
	03-08	2500/3500 HD	SHORT BED WITH FACTORY HITCH	D1102	TLD1002	\$
	03-08	2500/3500 HD	LONG BED WITHOUT HITCH	D1101(2)	TLD1101 (2)	\$
	03-08	2500/3500 HD	SHORT BED WITHOUT HITCH	D1101	TLD1101	\$
CHEVY / GMC	82-87	2500	LONG BED	C1200 (2, H8)	TLC1200 (2, H8)	\$
	82-90	3500	LONG BED	C1200 (2, H8)	TLC1200 (2, H8)	\$
	88-98	2500	SHORT BED	C1201 (1, H4)	TLC1201 (1, H4)	\$
	88-98	2500	LONG BED	C1201 (H4)	TLC1201 (H4)	\$
	91-00	3500	SHORT BED	C1201 (1, H4)	TLC1201 (1, H4)	\$
	91-00	3500	LONG BED	C1201 (H4)	TLC1201 (H4)	\$
	99-00	2500 LD	LONG BED	C1202	TLC1202	\$
	01-07	2500/3500 HD CLASSIC	SHORT BED	C1204 (4)	TLC1204 (4)	\$
	01-08	2500/3500 HD CLASSIC & NEW BODY	LONG BED	C1205	TLC1205	\$
	07-08	2500/3500 NEW BODY	SHORT BED	C1206	TLC1206	\$

SuperTruss Extension



TLI #	WTS#	PRICE	LENGTH	DEAD WEIGHT TW / GW	WEIGHT DISTRIBUTING TW / GTW
E1521	TLE1521	\$	21"	750 / 7,500	1,400 / 14,000
E1524	TLE1524	\$	24"	750 / 7,500	1,400 / 14,000
E1528	TLE1528	\$	28"	750 / 7,500	1,200 / 12,000
E1532	TLE1532	\$	32"	650 / 6,500	1,200 / 12,000
E1536	TLE1536	\$	36"	650 / 6,500	1,200 / 12,000
E1542	TLE1542	\$	42"	600 / 6,000	1,200 / 12,000
E1548	TLE1548	\$	48"	600 / 6,000	1,200 / 12,000




INTERNATIONAL
 Celebrating Over 30 Years

FOOTNOTES

- 1 SPARE TIRE HANGER AND TAILPIPE MODIFICATION MAY BE NECESSARY
- 2 REQUIRES MODIFICATION TO SPARE TIRE HANGER
- 3 WILL ONLY WORK WITH FACTORY WELDED ON 3" x 2" RECEIVER HITCH
- 4 2007 FITS ONLY CLASSIC BODY STYLE

H INDICATES THAT DRILLING A HOLE WILL BE REQUIRED, AND THE NUMBER FOLLOWING DESIGNATES THE TOTAL NUMBER OF HOLES REQUIRED FOR INSTALLATION
 (EXAMPLE: H4 = 4 HOLES DRILLED)

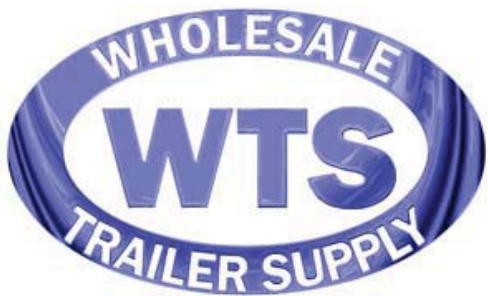

www.wholesaletrailer.com

No Splice Wire Harnesses

TYPE A



TYPE B



TLI#	WTS#	PRICE	DESCRIPTION	TYPE
W6021	TLW6021	\$	7-WAY WIRING PIGTAIL FOR 21" EXTENSION	A
W6024	TLW6024	\$	7-WAY WIRING PIGTAIL FOR 24" EXTENSION	A
W6028	TLW6028	\$	7-WAY WIRING PIGTAIL FOR 28" EXTENSION	A
W6032	TLW6032	\$	7-WAY WIRING PIGTAIL FOR 32" EXTENSION	A
W6036	TLW6036	\$	7-WAY WIRING PIGTAIL FOR 36" EXTENSION	A
W6042	TLW6042	\$	7-WAY WIRING PIGTAIL FOR 42" EXTENSION	A
W6048	TLW6048	\$	7-WAY WIRING PIGTAIL FOR 48" EXTENSION	A
W6510	TLW6510	\$	10' 7-WAY UNIVERSAL FIT TRUCK TO CAMPER / FIFTH WHEEL WIRING HARNESS	A
W6524	TLW6524	\$	7-WAY WIRING PIGTAIL FOR CAMPER AND TRAILER FITS 21" - 28" EXTENSION	B
W6532	TLW6532	\$	7-WAY WIRING PIGTAIL FOR CAMPER AND TRAILER FITS 32" - 36" EXTENSION	B
W6548	TLW6548	\$	7-WAY WIRING PIGTAIL FOR CAMPER AND TRAILER FITS 42" - 48" EXTENSION	B

TurnBuckles

TLI#	WTS#	PRICE	DESCRIPTION	INFO
S9050	TLS9050	\$	SPRING LOAD XL KIT - SPRING LOADED TURNBUCKLE FOR FRAME MOUNT TIEDOWN - STAINLESS	SET OF 2
S9000	TLS9000	\$	BASIC SPRING LOAD KIT - SPRING LOADED UNITS W/2 HEAVY DUTY TURNBUCKLES	SET OF 2
S9520	TLS9520	\$	FASTGUN TURNBUCKLES - USE W/FRONT BED MOUNTED TIEDOWNS - STAINLESS - GREY - 14.5" TO 21.5"	SET OF 2
S9521	TLS9521	\$	FASTGUN TURNBUCKLES - USE W/FRONT BED MOUNTED TIEDOWNS - STAINLESS - WHITE - 14.5" TO 21.5"	SET OF 2
S9527	TLS9527	\$	FASTGUN TURNBUCKLES - USE W/FRONT BED MOUNTED TIEDOWNS - STAINLESS - POLISHED - 14.5" TO 21.5"	SET OF 2
S9522	TLS9522	\$	FASTGUN TURNBUCKLES - USE W/BUMPER OR FRAME MOUNT TIEDOWN - STAINLESS - GREY - 25" TO 43"	SET OF 2
S9523	TLS9523	\$	FASTGUN TURNBUCKLES - USE W/BUMPER OR FRAME MOUNT TIEDOWN - STAINLESS - WHITE - 25" TO 43"	SET OF 2
S9526	TLS9526	\$	FASTGUN TURNBUCKLES - USE W/BUMPER OR FRAME MOUNT TIEDOWN - STAINLESS - POLISHED - 25" TO 43"	SET OF 2
S9524	TLS9524	\$	FASTGUN TURNBUCKLES - DERRINGER QUICK DISCONNECT HANDLES - ZINC PLATED	SET OF 4
S9525	TLS9525	\$	FASTGUN TURNBUCKLES - DERRINGER QUICK DISCONNECT HANDLES - STAINLESS - WHITE POWDERCOAT	SET OF 4
S9528	TLS9528	\$	FASTGUN TURNBUCKLES - DERRINGER QUICK DISCONNECT HANDLES - STAINLESS - POLISHED	SET OF 4
S9500	TLS9500	\$	FASTGUN LOCK SET - 4 MATCHING KEYED LOCKS (INCLUDES 4 KEYS)	SET OF 4
S9013	TLS9013	\$	ANCHORGUARDS - INCLUDES 2 SPRING LOADED SS TURNBUCKLES & 2 CUSHIONED SS TURNBUCKLES	SET OF 4
S9020	TLS9020	\$	DERRINGER ANCHORGUARDS - ANCHORGUARDS W/POLISHED DERRINGER QWK DISCONNECT HANDLES	SET OF 4
S9012	TLS9012	\$	HOOK TO HOOK TURNBUCKLES - HEAVY DUTY FORGED - INCLUDED W/S9000 SPRING LOAD KIT - 9" TO 13"	SINGLE
S9011	TLS9011	\$	EYE TO EYE TURNBUCKLES - HEAVY DUTY FORGED INCLUDED W/ALL SUPERTRUSS EXTENSIONS - 9" TO 13"	SINGLE

Accessories

TLI#	WTS#	PRICE	ITEM	DESCRIPTION
A7001	TLA7001	\$	CAMPER BUMPER	KIT INCLUDES TWO TRUCK CAMPER RUBBER BULK HEAD BUMPSTOPS
A7004	TLA7004	\$	ANCHOR RELOCATION KIT	UNIVERSAL CAMPER ANCHOR RELOCATION KIT. FITS ALL CAMPERS
A7008	TLA7008	\$	TWO STEP	TWO DIAMOND PLATED GRIP STEPS - ATTACH TO TORKLIFT FRONT TIEDOWNS
A7010	TLA7010	\$	CAMP'R PACK'R	STEEL ASSEMBLY KIT FOR 2 CAMPER STANDS (LUMBER NOT INCLUDED)
A7100	TLA7100	\$	SUPERTRUSS SKID WHEEL	HEAVY DUTY SKIDWHEEL ASSEMBLY FOR SUPERTRUSS EXTENTIONS
A7200	TLA7200	\$	STABLE LOAD	SUSPENSION UPGRADE FOR '85-08 FORD AND '94-08 DODGE APPLICATIONS
A7201	TLA7201	\$	STABLE LOAD SPACER	ONE INCH SPACER ADAPTER FOR A7200 STABLE LOAD ONLY
A7300	TLA7300	\$	STABLE LOAD	SUSPENSION UPGRADE FOR '94-08 CHEVY / GMC APPLICATIONS
A7501	TLA7501	\$	GLOWSTEP ADD-A-STEP	ADDS AN ADDITIONAL STEP TO THE GLOWSTEP SCISSOR STEP
A7502	TLA7502	\$	GLOWSTEP TWO STEP	HEAVY DUTY SCISSOR STEP 20"W / 6"D / 16.5"H - MOUNTING BRACKET AT 19.5"H
A7503	TLA7503	\$	GLOWSTEP THREE STEP	HEAVY DUTY SCISSOR STEP 20"W / 6"D / 24"H - MOUNTING BRACKET AT 27"H
A7504	TLA7504	\$	GLOWSTEP FOUR STEP	HEAVY DUTY SCISSOR STEP 20"W / 6"D / 31.5"H - MOUNTING BRACKET AT 34.5"H
A7505	TLA7505	\$	GLOWSTEP FIVE STEP	HEAVY DUTY SCISSOR STEP 20"W / 6"D / 39"H - MOUNTING BRACKET AT 42"H
A7506	TLA7506	\$	GLOWSTEP SIX STEP	HEAVY DUTY SCISSOR STEP 20"W / 6"D / 46.5"H - MOUNTING BRACKET AT 49.5"H

"We recommend Torklift tie downs for their strength, reliability, ease of installation. We also install the superhitch, the ONLY safe way to tow behind a camper. If you're not using Torklift, it's time to make the change - great product, great warranty, great people!"

Jeff, Fife RV, Fife WA



TORKLIFT™

INTERNATIONAL

Celebrating Over 30 Years